

CREDIT CARD TRANSACTIONS

Swipe card with magnetic strip facing lower inside
Enter sale amount and press **ENTER**
Confirm last four digits match and press **YES**
Press **YES** to print Customer Receipt or **NO** to skip.

NFC / APPLE PAY TRANSACTIONS

Press **SALE**
Enter sale amount and press **ENTER** key
Hold card or cell phone just above the screen. Terminal will beep
Press **YES** to print Customer Receipt or **NO** to skip.



EMV TRANSACTIONS

Insert card chip side first into EMV slot
Enter sale amount and press **ENTER** key
Press **YES** to print Customer Receipt or **NO** to skip.
Remove card



PIN DEBIT CARD TRANSACTIONS

ONLY FOR MERCHANTS WITH A PIN PAD

Press **OTHER**
Press **DEBIT SALE**
Swipe card with magnetic strip facing lower inside
Enter sale amount and press **ENTER** key
Ask customer to enter PIN# on Pin Pad
Customer presses **ENTER** key on Pin Pad
Press **YES** to print Customer Receipt or **NO** to skip.



EBT CARD TRANSACTIONS

ONLY FOR MERCHANTS WITH A PIN PAD

Press **OTHER**
Press **EBT**
Select EBT Transaction Type
Swipe card with magnetic strip facing lower inside
Enter sale amount and press **ENTER** key
Ask customer to enter PIN# on Pin Pad
Customer presses **ENTER** key on Pin Pad
Press **YES** to print Customer Receipt or **NO** to skip.



FD130 RETAIL



VOID SALE (CREDIT TRANSACTIONS ONLY)

Press **OTHER**
Press **VOID**
Enter **SEQ #** & press **ENTER**
Press **OK**

REFUND / RETURN

Press **OTHER**
Press **REFUND**
Enter refund amount & press **ENTER**
Swipe or key in acct # & press **ENTER** or use EMV / NFC
Press **YES** to print Customer Receipt or **NO** to skip.

REPORTS

Press **OTHER**
Press **REPORT**
Press **PRINT REPORTS**
Press desired report button

BATCH / SETTLEMENT / CLOSE DAY

Press **OTHER**
Press **CLOSE BATCH**
Press **OK**

REPRINT A RECEIPT

Press **OTHER**
Press **REPRINT**
Enter **SEQ #** & press **ENTER**
Press **YES** to print Customer Receipt or **NO** to skip.

MANUAL (KEYED) TRANSACTION

Press **SALE**
Enter sale amount and press **ENTER** key
Key in **CREDIT CARD #** & press **ENTER**
Enter **EXPIRATION DATE** & press **ENTER**
If card is not present, press **NO**
Enter **CUSTOMER'S HOUSE NUMBER** & press **ENTER**
Enter **CUSTOMER'S BILLING ZIP CODE** & press **ENTER**
Press **YES** to print Customer Receipt or **NO** to skip.
If card is present, press **1. YES**
Enter **CUSTOMER'S BILLING ZIP CODE** & press **ENTER**
Press **YES** to print Customer Receipt or **NO** to skip.



TECH SUPPORT 800-647-3722
CUSTOMER SERVICE 866-873-2200