

EMV (CHIP) CARDS

Enter sale amount on the S80 and press **ENTER**



Insert card chip side first into EMV slot on the Pin Pad
If prompted, customer enters PIN# on Pin Pad
Press **ENTER** to print Customer Receipt or **CANCEL** to skip.
Remove card when prompted

SWIPED CREDIT CARDS

Enter sale amount on the S80 and press **ENTER**

Swipe card on the Pin Pad
If prompted, select **CREDIT** or **DEBIT**
If prompted, customer enters PIN# on Pin Pad
Press **ENTER** to print Customer Receipt or **CANCEL** to skip.

CONTACTLESS TRANSACTIONS



Enter sale amount on the S80 and press **ENTER**

Hold card or cell phone just above the Pin Pad screen. Terminal will beep
Press **YES** to print Customer Receipt or **NO** to skip.
Press **ENTER** to print Customer Receipt or **CANCEL** to skip.

MANUAL (KEYED) TRANSACTION

Enter sale amount on the S80 and press **ENTER**

Key in **CREDIT CARD #** on the Pin Pad & press **ENTER**
Enter **EXPIRATION DATE** & press **ENTER**
Enter **CVV2 CODE (SECURITY CODE)** & press **ENTER**
Enter **CUSTOMER'S HOUSE NUMBER** & press **ENTER**
Enter **CUSTOMER'S BILLING ZIP CODE** & press **ENTER**
Press **ENTER** to print Customer Receipt or **CANCEL** to skip.

TIP ADJUSTMENTS

Press **FUNCTION** button on the S80
Scroll to and select **TIP MENU**
Press **4. BY TRANS #**
Enter **TRANSACTION #** & press **ENTER**
Press **ENTER** key
Enter TIP amount & press **ENTER** key
Press **ENTER** to confirm
OR Press **1. SCROLL UNTIPPED**
Use arrow keys to scroll untipped trans
Press **ENTER** to select trans
Enter TIP amount & press **ENTER** key
Press **ENTER** to confirm
Press **CANCEL** three times to return to main screen

PAX S80 - SP30 RESTAURANT



PASSWORD:
CURRENT DATE
MMDDYYYY
EX: 07012016

REPORTS

Press **FUNCTION** button on the S80
Press **1. REPORT**
Press **CANCEL** to return to main screen
For more report options:
Press **MENU** button
Press **1. REPORTS**
Enter **PASSWORD** & press **ENTER**
Select desired report and follow prompts

PIN DEBIT CARD TRANSACTIONS

Press **F3** to change from CREDIT to **DEBIT**
Enter sale amount & press **ENTER** key
Swipe, insert, or tap payment
Ask customer to enter PIN# on Pin Pad
Customer presses **ENTER** key on Pin Pad
Press **ENTER** to print Customer Receipt or **CANCEL** to skip.

VOID SALE (CREDIT TRANSACTIONS ONLY)

Press **FUNCTION** button on the S80
Scroll to or press **7. VOID**
Enter **PASSWORD** & press **ENTER**
Press **1. CREDIT**
Enter **TRANSACTION #** & press **ENTER**
Press **ENTER** key
Press **ENTER** key to confirm
Press **ENTER** for Customer Receipt or **CANCEL** to skip.
Press **CANCEL** twice to return to main screen

REFUND / RETURN

Press **F4** key on the S80 until **RETURN** is displayed
Enter refund amount & press **ENTER**
Swipe, insert, tap or key in card # on Pin Pad & press **ENTER**
Press **ENTER** for Customer Receipt or **CANCEL** to skip.

REPRINT A RECEIPT

Press **FUNCTION** button on the S80
Scroll to or press **6. REPRINT**
Press **1. LAST** to reprint customer copy of last trans.
Press **2. ANY** for other receipts:
Select payment type
Enter **TRANSACTION #** & press **ENTER**
Press **1. CUSTOMER** for customer copy or
Press **2. MERCHANT** for store copy
Press **CANCEL** twice to return to main screen

BATCH / SETTLEMENT / CLOSE DAY

ADJUST TIPS FIRST!

Press **FUNCTION** button on the S80
Press **2. BATCH**
Press **1. BATCH CLOSE**
Press **CANCEL** twice to return to main screen



CUSTOMER SERVICE / TECH SUPPORT
866-873-2200

Revised July 2016